


	PAGE
DIAGRAM	
PARTS LIST	
REPAIR PARTS AND SERVICE	
ASSEMBLY INSTRUCTIONS	3
STEP 1 FRAME ASSEMBLY	3
CTED 2 BACKREST PREPARATION	3
STEP 3 ATTACHING BACKREST AND SEAT	4
STEP 4 LEG CURL	4
J121 7 220 00	

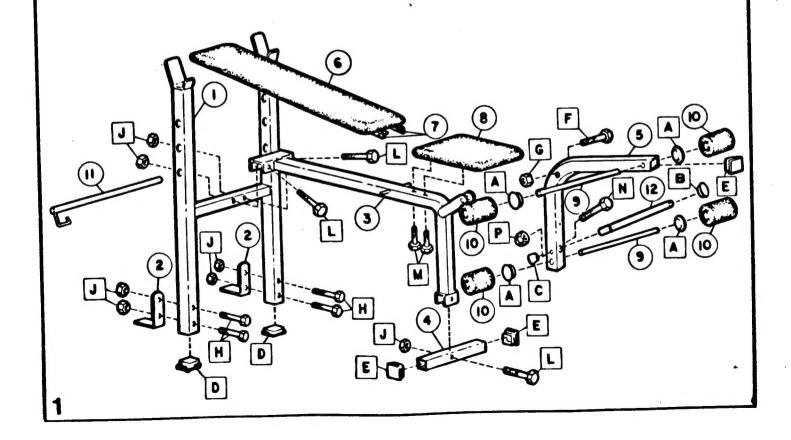

# REPAIR PARTS AND SERVICE

## **IMPORTANT**

\*PRE-ASSEMBLED WITH SEAT & BACKREST

\*BEFORE CALLING THE 800 NUMBER \*

IN ORDER TO RECEIVE SERVICE ON THIS PRODUCT YOU WILL HAVE TO FIRST SEND IN YOUR WARRANTY CARD

# **CUSTOMER SERVICE 1-800-225-0653**

ALL OF THE PARTS FOR THE WEIGHTBENCH CAN BE ORDERED FROM WEIDER HEALTH AND FITNESS, PARTS SERVICE DEPT., 900 WEST ST. OLNEY, ILL. 62450. WHEN ORDERING, PARTS WILL BE SENT AND BILLED AT THE CURRENT PRICES. PRICES MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. STANDARD HARDWARE ITEMS ARE AVAILABLE AT LOCAL HARDWARE STORES.

TO OBTAIN PARTS DO NOT GO BACK TO THE STORE WHERE YOU

#### PURCHASED THIS UNIT.

ALWAYS INCLUDE THE FOLLOWING INFORMATION WHEN ORDERING PARTS:

MODEL NO.

EXERCISE CHART

MAME OF PART


• ORDERING NUMBER

CNN-1080

# IMPORTANT NOTICE


# BEFORE BEGINNING ASSEMBLY READ THE FOLLOWING

- PLEASE READ THE INSTRUCTIONS CAREFULLY, PAYING PARTICULAR ATTENTION TO ALL 1. WARNINGS, CAUTIONS, NOTES OR NOTICES. LAY OUT UNASSEMBLED PARTS: FAMILIARIZE YOURSELF WITH THE DRAWINGS THEN READ AND UNDERSTAND THE INSTRUCTIONS THOROUGHLY.
- THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT PRIOR TO USE. 2.
- DO NOT DESTROY THE PACKING AND CARTON UNTIL THE UNIT IS COMPLETELY ASSEMBLED. 3.
- DO NOT DESTROY THE INSTRUCTION MANUAL, USE IT FOR ORDERING REPLACEMENT PARTS. 4.
- RECOMMENDED TOOLS FOR PROPER ASSEMBLY ARE AS FOLLOWS: A HAYMER, PLIERS, MEDIUM SIZE FLATHEAD SCREWDRIVER, AND TWO 6" ADJUSTABLE WRENCHES. 5.

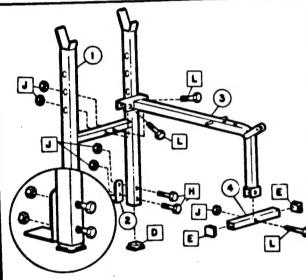

### STEP 1 FRAME ASSEMBLY

Begin by inserting 2 SQUARE PLASTIC CAPS (D) into UPRIGHT (1). Align bolt holes on L-BRACKETS (2) with bolt holes on UPRIGHT (1). Secure each bracket with 2 HEX HEAD BOLTS (H) and 2 LOCK NUTS (J). Align u-bracket on MAIN FRAME (3) with hole in FRONT SUPPORT (4) and secure with HEX HEAD BOLT (L) Lower rear u-bracket and LOCK NUT (J). of MAIN FRAME (3) onto crossmember of UPRIGHT (1). Align bolt holes and secure with 2 HEX HEAD BOLTS (L) and 2 LOCK NUTS (J). Insert 2 SQUARE PLASTIC CAPS (E) into FRONT SUPPORT (4) Tighten all bolts!

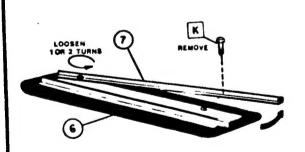


#### BACKREST PREPARATION STEP 2

Note: The lower or attachment end of the BACKREST (6) can be identified quickly by the LONG ANGLE IRONS (7).
The LONG ANGLE IRONS (7) will be extended approximately two inches beyond the BACKREST (6).

Turn BACKREST (6) over to expose work area. Both LONG ANGLE IRONS (7) have been fastened to BACKREST (6) for


shipment. One Long Angle Iron must be loosened in order to assemble BACKREST (6) to main frame pivot rod. The lower MACHINE SCREW (K) must be removed while the upper MACHINE SCREW (K) is only loosened. LONG ANGLE IRON (&) can now swing freely from the lower end of BACKREST (6).

#### STEP 3 ATTACHING BACKREST & SEAT

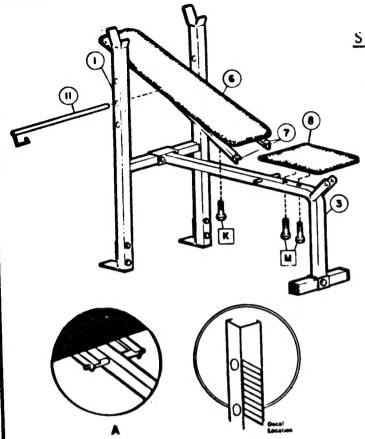

BACKREST: To aid in attaching the Backrest, first slide the BACKREST ADJ. BAR (11) through one of the hole patterns in the UPRIGHTS (1). With LONG ANGLE IRON (7) free, lower BACKREST (6) to main frame pivot rod. Slide secured LONG ANGLE IRON (7) onto one side of pivot rod. Swing the free LONG ANGLE IRON (7) back to its original position and onto the opposite end of the pivot rod. See Detail A. Replace MACHINE SCREW (K) that was removed in Step 2 and tighten all machine screws.

SEAT: With SEAT (8) right-side up, lower to MAIN FRAME (3) bolt holes. Align holes with Seat and fasten with 2 MACHINE SCREWS (M).

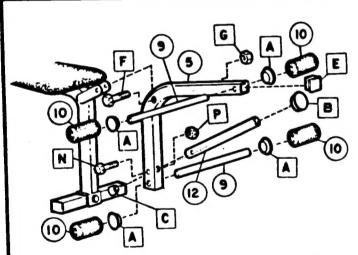

#### STEP 4 LEG CURL

First, slide WEIGHT PIN (12) thru angled holes on the front of LEG CURL (5). Align bolt holes and secure with HEX HEAD BOLT (N) and ACORN NUT (P). Place COVER CAP - 15 (C) over rear extended portion of WEIGHT PIN (12). Insert ROUND PLASTIC CAP (B) into end of WEIGHT PIN (12). Insert SQUARE PLASTIC CAP (E) into end of LEG CURL (5). Position LEG CURL (5) between leg

curl brackets on MAIN FRAME (3). Secure with HEX HEAD BOLT (F) and LOCK NUT (G). DO NOT OVER TIGHTEN! Repeat the following instructions until all remaining leg curl parts are in place. First, slide PAD BAR (9) thru proper hole in LEG CURL (5) until equal amounts of bar are on both sides. (To help with the following step, a small amount of liquid detergent should be applied to both ends of PAD BAR (9). This acts as a lubricant in assembling FOAM PADS (10) and also acts as an adhesive after it has dried.) Slide FOAM PAD (10) onto each end of PAD BAR (9). Insert ROUND PLASTIC CAPS (A) into each end of PAD BAR (9).